

Printer Settings

It is crucial that your printer is setup the best way to secure the best print quality and durability of the print. Always use original OKI consumables. If you buy them from Floralabels and our partners, you are sure to get the best quality.

Always use the PCL-driver and not the PS driver for labels, signs and banners.

We recommend the following settings for your OKI C650 and OKI C834 printers:

- Size: A4
- Source: Multi-Purpose tray
- Type: Usertype 2
- Paper Feed Options: Remove all ticks and click on OK

Job options

- Quality: Normal 600 x 600
- Advanced: Choose 'Always create 100% black (K) toner' and click on OK

On older models Usertype 2 is not pre-installed. Here you should choose:

- Type: Film/Transparent/Cardboard
- Weight: Ultra heavy 3, 2 or 1 (choose the highest number possible).



